

Particle View Software

Particle Counter Download Utility

Particle View software includes all of the functions required for the downloading, viewing of data, and production of both tabular and graphic reports. It is designed for use with the Met One Instruments, Inc. line of hand held and bench top particle counters and is compatible with the following models: GT-521, GT-521S, GT-526, GT-526S, 804, BT-637, BT-637S, BT-610 and BT-620.

Particle View Features:

Passwords

Two password levels (administrator and user).

Secure Database

Windows SQL Server Express database.

Unit Conversions

Concentration conversions (particles / liter, particles / cubic foot, particles / cubic meter) and temperature (°C or °F).

Alarm Limits

Particle count, temperature and relative humidity alarm limits (High, High-High, Low, Low-Low).

Sort / Filter Data

Sort data by date / time, location and particle counts. Filter data by date / time, location, and particle size.

Reports

View and print tabular reports. Export spreadsheet compatible files (CSV format).

Charts

View, print and export graphical charts.

System Requirements:

Processor Speed:	1GHz or faster
Memory:	512MB minimum
Disk Space:	60MB
Operating System:	Windows XP, Vista, Windows 7 and Windows 8

Applications:

Cleanrooms	Indoor Air Quality	Filter Testing	Emission Sourcing
Controlled Environments	Process Control	Compliance Testing	Remote Sampling



1600 Washington Blvd. • Grants Pass, OR 97526 • 541.471.7111 • www.metone.com
sales@metone.com

Particle View Images

Main Display



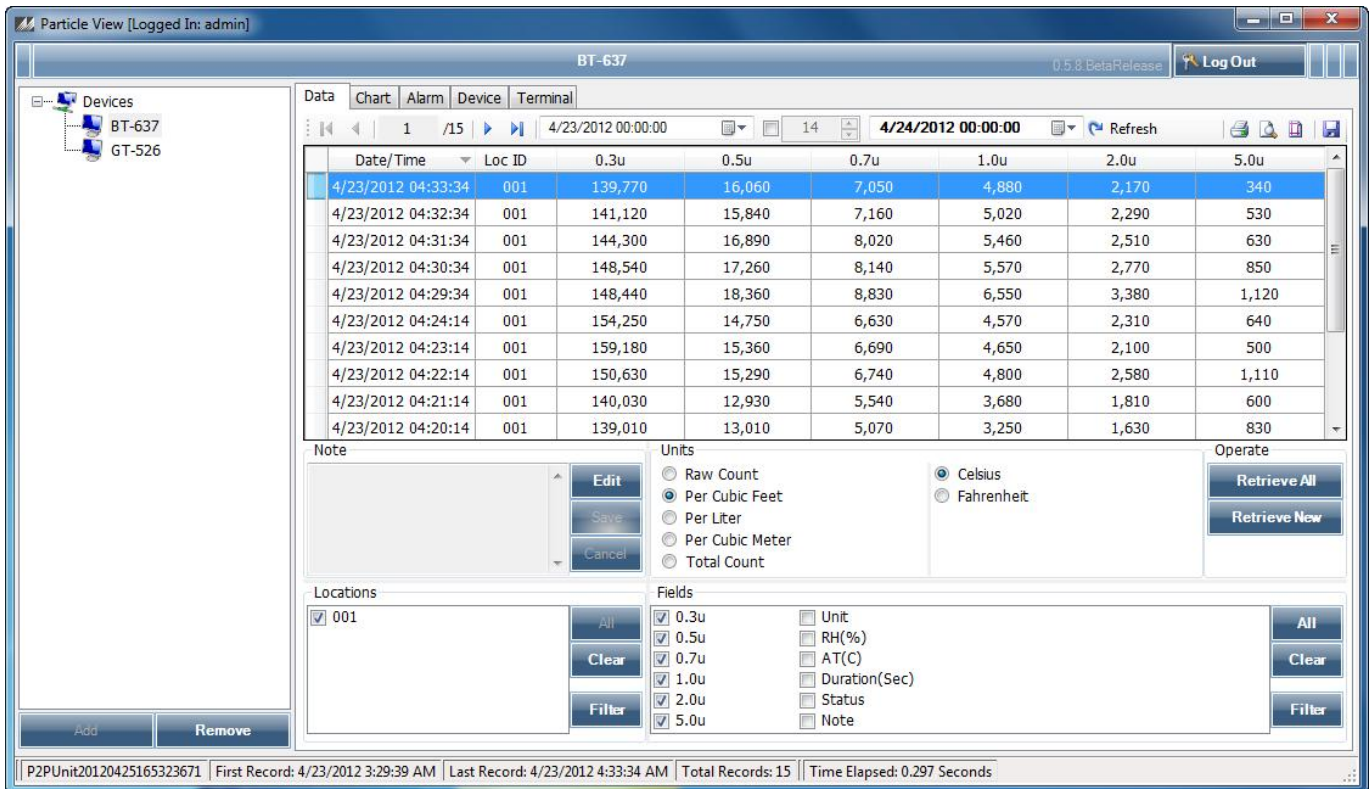


Chart Display

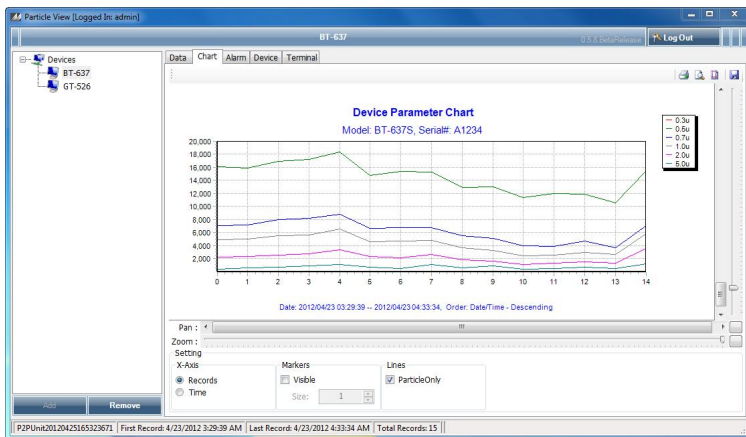

Report Preview

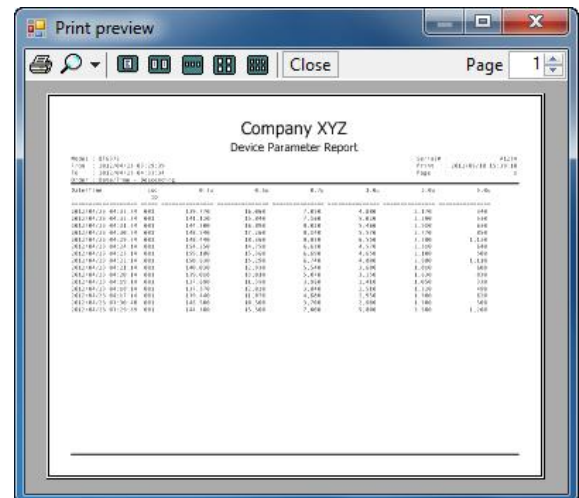

Specifications subject to change without notice.

Rev. July 2015



1600 Washington Blvd. • Grants Pass, OR 97526 • 541.471.7111 • www.metone.com
sales@metone.com